

DATAMASTER ERROR CODES

11.0.2 NUMERIC CODE AND INTERPRETATION

CODE NUMBER	MESSAGE CODE	INTERPRETATION
1.*	SYSTEM WON'T ZERO	Unable to zero detector voltage.
2.	TEMPERATURE LOW	Sample chamber temperature at 45 °C or below.
3.	TEMPERATURE HIGH	Sample chamber temperature at 55 °C or above.
5.*	RADIO INTERFERENCE	Radio frequencies detected.
6.	FATAL SYSTEM ERROR (ADDRESS)	Random Access Memory (RAM), Read Only Memory (ROM), or Peripheral Interface Adapter (PIA) not responding properly.
7.*	CALIBRATION ERROR	Internal standard does not read within 10% of the value determined at time of calibration.
8.*	PRINTER ERROR	Printer not responding properly.
9.*	RAM ERROR (ADDRESS)	RAM checksum does not match the value calculated following the last write.
10.	PUMP ERROR	Flow detector does not detect pump operation.
11.	BLANK ERROR	Instrument obtains reading greater than 0.003 g/210L during blank test.
12.	DETECTOR OVERFLOW	Detector output exceeds the 1.999V that is readable by the instruments Analog/Digital converter.
13.	FILTER ERROR	Filter solenoid not activating properly.
15.	SIMULATOR OUT OF RANGE	Simulator reading outside acceptable limits.
17.	DATA MEMORY BATTERY LOW	RAM battery backup failing.
19.	AMBIENT FAIL	Ethanol or other substance detected in sample chamber after purge.
20.	SAMPLES OUTSIDE 10%	

11.0.3 NON-NUMERIC CODE AND INTERPRETATION

V	INVALID SAMPLE
R	REFUSED TEST
X	INTERFERANT
I	INCOMPLETE TEST